

Blowdown Accessories

Automatic Aftercooler

Assembly includes globe valve, check valve, strainer and automatic temperature regulating valve. The aftercooler reduces boiler blow-off to a safe temperature. Local codes vary and should be checked upon installation.




Aftercooler Sizing

MODEL	TYPE	FITS	DRAIN WATER SIZE	WATER INLET
205A	Auto	#87 & #810	2"	1/2"
301A	Auto	#1410 to #1800	3"	1"
205M	Manual	#87 & #810	2"	1/2"
301M	Manual	#1410 to #1800	3"	1"

Automatic Bottom Blowdown

Automatically blows boiler down at timed intervals and adjustable durations. Motorized ball valve installed on the boiler blow-off line is controlled by a solid state timer. Ensures that boiler is being blown down on a regular basis. Increases boiler life and ensures better boiler efficiency.

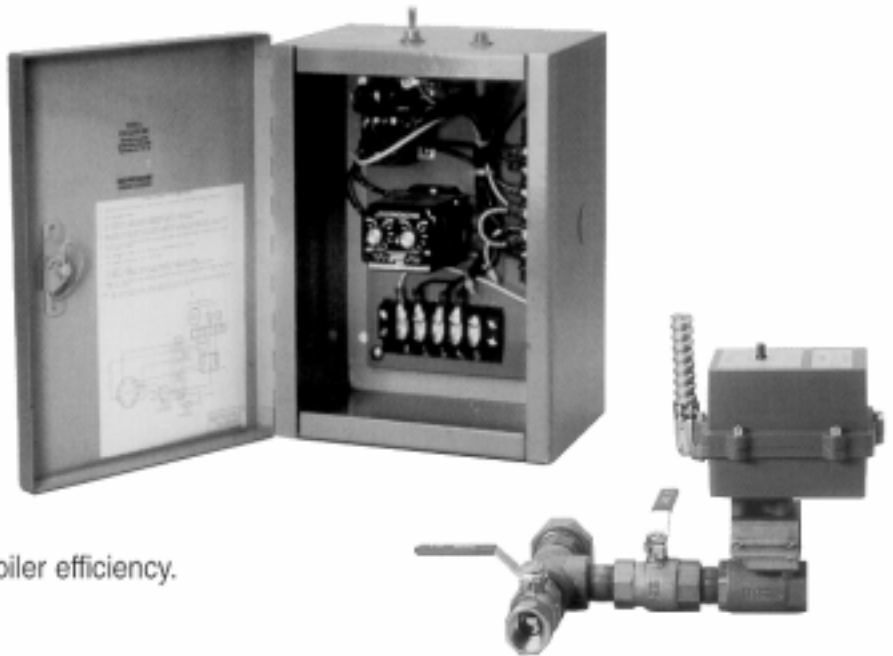

Lattner Blowdown System with Separator and Automatic Aftercooler.

SEICKEL & SONS INC.

MANUFACTURERS & REBUILDERS OF STEAM PRESSING EQUIPMENT

360 ELIZABETH AVE., NEWARK, NJ 07112 TEL. 973-242-1948 FAX 973-733-4956
315 WEST 36TH ST., SUITE 504, NY, NY 10018 TEL. 212-290-2120 FAX 212-290-2140

TOLL FREE IN U.S. 1-800-338-5044

WEB WWW.SEICKEL.COM

SALES@SEICKEL.COM