

## PARTS LIST

When ordering, please specify Machine Model and Serial Number, Part Number, Part Name and Quantity desired.

### PARTS LIST — continued

8. Handle bracket outside toe left. — wide.
9. Stud and Ball
10. Adjusting Nuts
11. Locking Nut
12. Ball Plate top
13. Ball Plate Bottom
14. Pressure adjusting rod  $\frac{3}{8}$ "
15. Pressure adjusting rod hand wheel.
16. Pressure adjusting rod spring.
17. Pressure adjusting rod spring adjusting nut.
18. Pressure adjusting rod domed nut.
19. Pressure adjusting rod clevis  $\frac{3}{8}$ "
20. Pressure adjusting rod clevis pin  $\frac{3}{8}$ " x  $2\frac{1}{2}$ "
21. Pressure adjusting rod bell crank.
22. Pressure adjusting rod bell crank shaft  $\frac{1}{2}$ " x  $7\frac{1}{2}$ "
23. Pressure adjusting rod bell crank lock screw.
24. Counter balance spring shaft 1" x 8"
25. Counter balance spring adjusting screw  $\frac{3}{8}$ " x 14"
26. Main bearing (specify Vaconite or Needle Roller).
27. Main bearing collar.
28. Main bearing spacer.
29. Main bearing shaft  $1\frac{1}{2}$ " x 13"
30. Main bearing shaft lock screw.
31. Main bearing pillow block.
32. Main bearing pillow block bolts.
33. Main bearing pillow block cover and screws — right and left.
34. Back lever link.
35. Back lever link pin  $\frac{3}{8}$ " x  $3\frac{1}{2}$ " (5).
36. Shock absorber (MODEL X100).
37. Shock absorber arm.
38. Shock absorber lower pivot shaft 1" x 6"
39. Spring roller.
40. Spring roller shaft  $\frac{3}{8}$ " x  $3\frac{1}{2}$ "
41. Spring roller washer.
42. Lever spring.
43. Locking latch.
44. Locking latch spring.
45. Locking latch shaft  $\frac{3}{8}$ " x  $2\frac{1}{2}$ "
46. Locking latch release lever.
47. Locking latch release lever mounting bolt  $\frac{3}{8}$ " x 3"
48. Locking latch release lever spacer.
49. Locking latch release lever return spring.
50. Locking latch release lever return spring tension bolt 5/16" x 3" and nuts.
51. Push link.
52. Push link roller  $\frac{3}{8}$ " x  $1\frac{1}{2}$ "
53. Push link roller shaft  $\frac{1}{2}$ " x  $3\frac{1}{2}$ "
54. Push link bumper adjusting cup and locknut.
55. Push link bumper adjusting rubber buffer.
56. Front toggle.
57. Front toggle rubber buffer.
58. Toggle connecting link.
59. Toggle connecting link pins (2)  $\frac{3}{8}$ " x 3"
60. Main foot pedal.
61. Main foot pedal spring.
- 62.B Counter balance spring (blue)  $2\frac{3}{8}$ " x 11"
- 62.Y Counter balance spring (Yellow)  $2\frac{3}{8}$ " x 11"
- 62.W Counter balance spring (White)  $1\frac{1}{8}$ " x 12"
63. Counter balance spring tension mounting 1" x  $4\frac{1}{2}$ "
64. Pedal shaft 1" x  $19\frac{1}{2}$ "
65. Pedal shaft collar and lock screw (2).
66. Pedal shaft spacer (2)  $2\frac{3}{8}$ "
67. Steam foot pedal.
68. Vacuum foot pedal.
69. Foot pedal stop bolt (2).
70. Foot pedal spring.
71. Vacuum actuating arm and set screw.
72. Vacuum actuating connecting rod and lock nuts.
73. Buck steam shaft  $\frac{3}{8}$ " x 15"
74. Buck steam shaft  $\frac{3}{8}$ " x 20"
75. Buck steam shaft collar and set screw.
76. Buck steam shaft torsion lever and set screw.
77. Buck steam shaft torsion lever spring.
78. Buck steam shaft connecting rod and lock nuts.
79. Buck steam operating lever.
80. Buck steam actuating lever.
81. Buck steam actuating rod and lock nut.
82. Release bell crank.
83. Release bell crank mounting shaft and bolts and washers.
84. Release bell crank spacer.
85. Release bell crank rubber buffer and screw.
86. Release bell crank connecting rod and lock nuts.
87. Release rod C.P.  $\frac{1}{2}$ " x  $16\frac{1}{2}$ " and lock nuts.
88. Release rod knuckle joints.
89. Release trip lever.
90. Release trip lever mounting bolt.
91. Release trip lever finger pad and drive screws.
92. Clevis (7).
93. Clevis pin (7).
94. Fibre-glass cover and screws.
95. Table (specify type of machine).
96. Front cover.
97. Front cover domed nuts (4).
98. Valve assembly cover and screws.
99. Inlet pipe assembly.
100. Outlet pipe assembly.
101. Teflon hose
102. Drain valve 65T  $\frac{3}{8}$ "
103. Vacuum valve — Air V160  $1\frac{1}{2}$ " or  $1\frac{1}{2}$ "
104. Vacuum valve — Steam X150.
105. Head valve R121 AB.
106. Head valve gasket (copper V120).
107. Buck valve short X.180.
108. Buck valve standard X.185.
109. Buck valve gasket (copper V128).
110. Curved lever for vacuum valve 103.

# SEICKEL & SONS INC.

MANUFACTURERS & REBUILDERS OF STEAM PRESSING EQUIPMENT

360 ELIZABETH AVE., NEWARK, NJ 07112 TEL.973-242-1948 FAX 973-733-4956  
315 WEST 36<sup>TH</sup> ST., SUITE 504, NY, NY 10018 TEL.212-290-2120 FAX 212-290-2140  
TOLL FREE IN U.S. 1-800-338-5044

WEB [WWW.SEICKEL.COM](http://WWW.SEICKEL.COM)

[SALES@SEICKEL.COM](mailto:SALES@SEICKEL.COM)